

1490, 1494, 1594 and 1690 Tractors
Service Manual

Table of Contents

Description	Section No.	Form No.
Engine	Tab 2	
Separating the Tractor - Low Profile - 1490 and 1494 Tractors	2010	9-43508
Engine Removal - 1490 and 1494 Tractors without Cab	2110	8-24380
Cylinder Head, Valves and Rocker Arm - 1490 and 1494 Tractors	2115	8-24100
Cylinder Block - 1490 and 1494 Tractors	2120	8-24110
Crankshaft, Main Bearings, Flywheel and Oil Seals - 1490 and 1494 Tractors	2135	8-24400
Lubrication System - 1490 and 1494 Tractors	2145	8-24120
Cooling System - 1490 and 1494 Tractors	2155	8-24080
Turbocharger - 1490 and 1494 Tractors	2165	8-24090
Six Cylinder Engine - 1594 and 1690 Tractors	2215	9-43586
Lubrication System - 1594 and 1690 Tractors	2245	9-43518
Cooling System - 1594 and 1690 Tractors	2255	9-43514
Turbocharger Failure Analysis - 1490 and 1494 Tractors	2565	9-78235
Fuel System	Tab 3	
Fuel System and Thermostat System	3110	8-56020
Fuel Injection Pumps	3112	8-56040
Fuel Injectors	3113	8-56030
Fuel System - 1594 and 1690 Tractors	3210	9-43516
Fuel Tanks	3140	9-43511
Fuel Tank Removal	3141	8-23720
Electrical	Tab 4	
Tractor Electrical System Troubleshooting	4001	8-24130
Cab Electrical System Troubleshooting (Sims Cab)	4002	8-24150
Cab Electrical Wiring Diagram	4015	8-23860
Wiring Diagram - 94 Series Tractors with Cab	4114	8-85800
Wiring Diagram - 94 Series Tractors without cab	4117	8-85810
Wiring Diagram - 90 Series High Platform	4141	9-43593
Wiring Diagram - 90 Series Low Profile	4142	9-43594
Electrical Equipment	4205	9-43571
Steering	Tab 5	
Steering Hand Pump	5010	8-24040
Steering System Oil Pump	5110	8-56250
Steering Cylinder - (Side Mounted) - 1494 Tractors	5120	8-56420
Front Axle (MFD) David Brown	5130	8-23290
Hydrostatic Steering - High Platform	5140	9-43561
Front Axle (MFD) Carraro AE3	5160	8-23480
Front Axle (MFD) Carraro 709/19	5260	8-56290

Reprinted

1490, 1494, 1594 and 1690 Tractors Service Manual

Table of Contents

Description	Section No.	Form No.
Power Train	Tab 6	
Troubleshooting the Powershift Transmission	6000	8-59740
Separating the 1490 and 1494 Tractors Between Engine and Transmission	6010	8-24410
Differential - Synchromesh Transmission - 1594 and 1690 Tractors	6060	8-23750
Independent Clutch Assembly - 1490 and 1494 Tractors	6140	9-43522
12 Speed Synchromesh Transmission	6140	8-23540
12/12 Inch Independant Clutch (Laycock)	6141	8-24420
Transfer Gearbox (MFD) - 1490 and 1494 Tractors	6142	8-23340
Transfer Gearbox - Mechanical Front Drive	6150	8-59780
Differential - Synchromesh Transmission - 1490 and 1494 Tractors	6160	8-23610
Synchromesh Gearbox - 1594 and 1690 Tractors	6161	9-43531
Independant Clutch Assembly - 1594 and 1690 Tractors	6161	9-43521
Final Drive - 1490 and 1494 Tractors	6170	8-23620
Separating the Tractor to Service the Front of the Transmission	6200	8-59770
Transfer Gearbox - (Carraro)	6242	8-23490
Powershift Hydraulic Pump	6225	8-23680
Powershift	6230	8-23550
Powershift Control Valve	6235	8-23660
Powershift Sequence Valves	6236	8-23670
Three Speed Transmission - Powershift	6240	8-23640
Reversible PTO Shaft	6245	9-43555
Differential - Powershift Transmission	6260	8-23650
Final Drive - 1594 and 1690 Tractors	6270	8-23760
Creeper Gearbox - 1494 Tractors	6280	8-85980
Multi Speed PTO - 1494 Tractors	6445	8-59830
Brakes	Tab 7	
Brake Valves, Lines, Linkage and Air Removal	7110	8-23770
Brakes	7140	8-23630
Hydraulic System	Tab 8	
Filters, Pumps and Relief Valve	8010	9-43572
Rockshaft, Lift Cylinder and Removal of the Schematic Control Valve - 1494 Tractors	8020	8-85970
Selector Dial Mechanism	8045	9-43550
Draft Sensing Units	8085	9-43553
Inlet Filter - Hydraulic System	8110	8-24440
Rockshaft, Lift Cylinder and Removal of the Selectromatic Control Valve - 1594	8120	8-56440
Remote Valves and Couplers	8190	8-23590
Hydraulic Adjustments	8204	9-43565
Hydraulic System - Specifications, How it Works and Fault Finding	8205	9-43566
Oil Cooler	8209	9-43573
Selectamatic Valve	8235	9-43574
Lower Link Sensing - 1594 Tractor	8280	9-43588
Chassis	Tab 9	
Engine Cover	9140	9-43581
Cab Removal	9140	8-23690
Air Conditioning Troubleshooting and System Checks	9240	8-59810
Air Conditioning System Checks	9340	8-59820